


How to Order

B
E

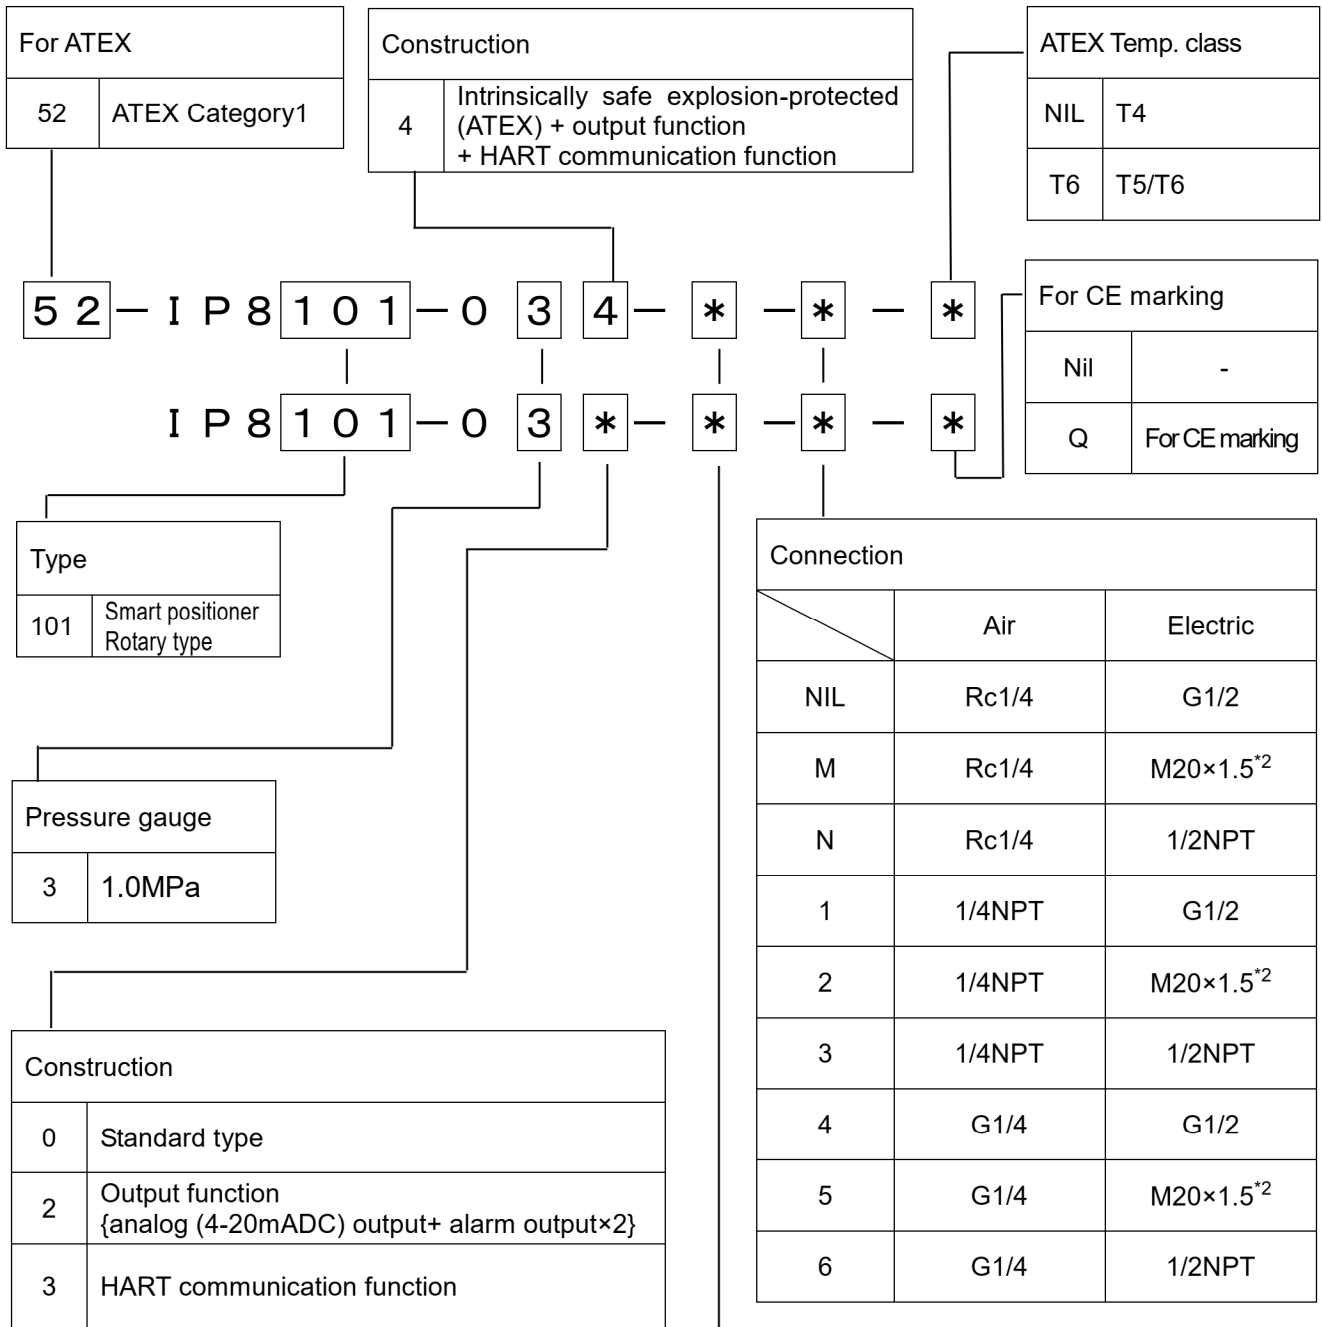

For ATEX	
52	ATEX Category1

Construction	
4	Intrinsically safe explosion-protected (ATEX) + output function + HART communication function

ATEX Temp. class	
NIL	T4
T6	T5/T6

For CE marking	
Nil	-
Q	For CE marking

Type	
101	Smart positioner Rotary type

Pressure gauge	
3	1.0MPa

Construction	
0	Standard type
2	Output function {analog (4-20mADC) output+ alarm output*2}
3	HART communication function

Connection		
	Air	Electric
NIL	Rc1/4	G1/2
M	Rc1/4	M20×1.5 ^{*2}
N	Rc1/4	1/2NPT
1	1/4NPT	G1/2
2	1/4NPT	M20×1.5 ^{*2}
3	1/4NPT	1/2NPT
4	G1/4	G1/2
5	G1/4	M20×1.5 ^{*2}
6	G1/4	1/2NPT

Accessory ^{*1}	
Nil	No accessory
C	Fork lever-type fitting M [Long type (M8×1.5)]
D	Fork lever-type fitting S [Short type (M8×1.5)]
H	External scale plate
W	With body cover window

*1 : If two or more accessories are required, the part numbers should be made according to alphabetical order.

<Ex>IP8101-030-CHW

*2 : When "52-" ATEX type specify symbol "M", "2", "5", Blue cable grant is equipped for electric connection..