Compact Compressor



Supplies compressed air in an environment with no air source such as cobots, AGV and AMRs



A single unit can be used to provide positive or vacuum pressure (vacuum pump).

Max. discharge pressure: 0.55 MPa Ultimate vacuum pressure: -70 kPa

* Use of the product as a vacuum pressure source after it is used as a positive pressure source (and vice versa) is prohibited because doing so degrades the performance.

Oil-free

Noise: 55 dB or less (When the silencer ANB1-01 is installed)

(When supplying positive pressure)

CRP Series


Grippers for collaborative robots

Air grippersVacuum pads, etc




Compact Compressor CRP Series

Max. flow rate of 10 l/min (ANR)

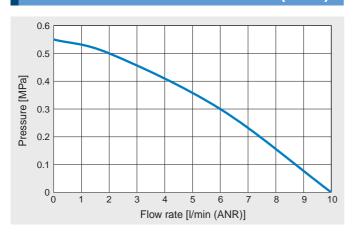


Reaches the ultimate vacuum pressure (-70 kPa) in 0.2 seconds


The time to reach the ultimate vacuum pressure when the vacuum pad is placed about 3 meters from the compressor

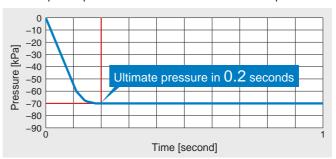


Applications

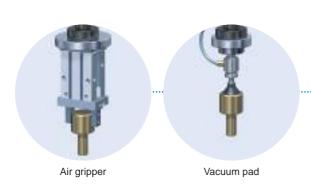


Robots

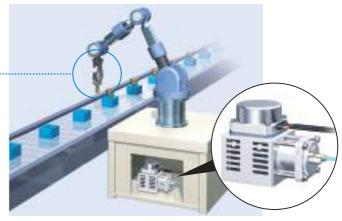

Autonomous Mobile Robot

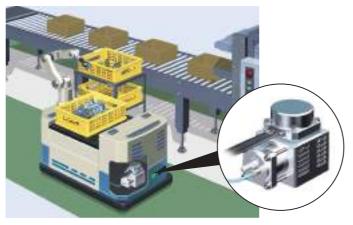

Pressurizing parts

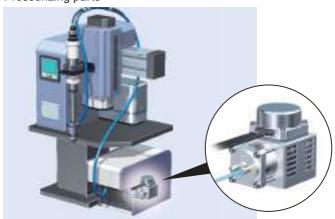


Environments without an air source



1

Compact Compressor CRP Series

60 cpm with a gripping force of 0.3 MPa

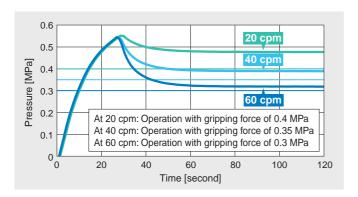

Tubing O.D. Ø 6 /l.D. Ø 4, Length 1 m O.5 L Tank Solenoid valve SY5120-5LZ-01 Air gripper 3-finger type MHS3-40D


Alarm

Alarm LED turns on or flashes when an error is detected



Install a tank (sold separately) in the system when performing continuous operation. Refer to the operation manual for details.

Can be mounted from 2 directions

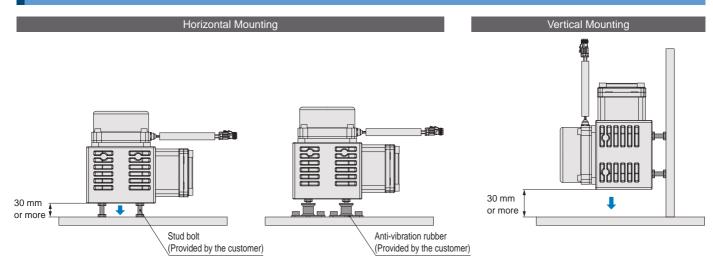

- st Use anti-vibration rubber if a large amount of vibrations are transferred to the embedded surface.
- * When installing, provide a space of 30 mm or more as shown for air intake and heat vent. Refer to the Specific Product Precautions (p. 9) and operation manual for details.


CONTENTS


System Construction	p. 3
How to Order	p. 4
Specifications	p. 5


Flow Rate Characteristics	p.	6
Dimensions	p.	7
Specific Product Precautions	p.	9



System Construction (Positive pressure applications)

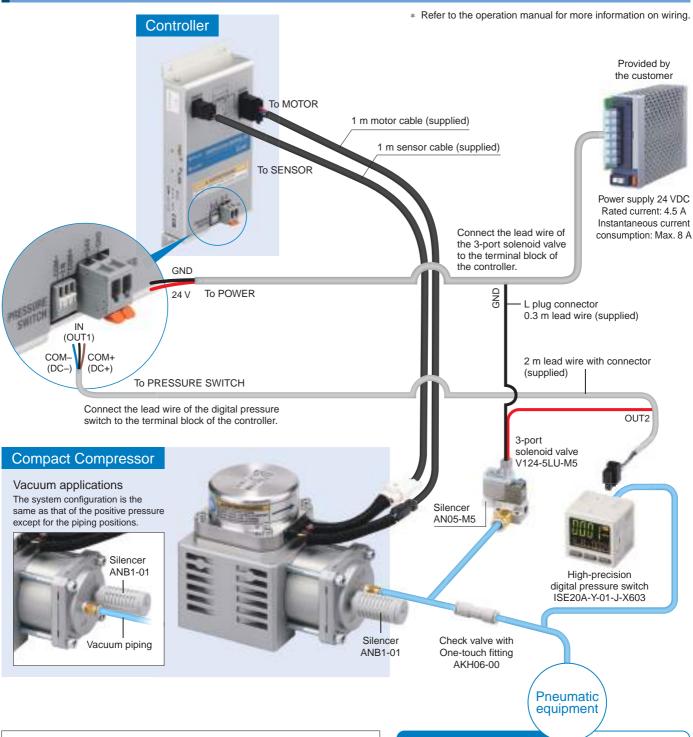

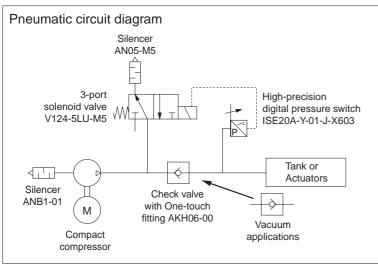


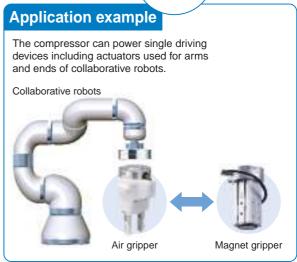

Compact Compressor CRP Series



 How to Oder



1 Controller mounting

Symbol	Mounting
S	Screw mounting
D	DIN rail mounting*1

*1 The DIN rail mounting bracket is included in the package, but a DIN rail is not supplied.

2 Cable length

Symbol	Cable length
1	1 m

3 Silencer for inlet port

Symbol	Part no.	Noise (Positive pressure)
Α	AN10-01	62 dB
В	ANB1-01	55 dB
_	None	75 dB

4 High-precision digital pressure switch

Symbol	Part no.	
P ISE20A-Y-01-J-X603*1		
_	None	

*1 Make sure to connect the PNP output of the high-precision digital pressure switch to the controller. This allows the product to control pressure and operate stop/start (unload/ load) functions.

5 Check valve with One-touch fitting for exhausting residual pressure

Symbol	Part no.	Applicable tubing O.D.
K	AKH06-00	Ø 6
	_	None

6 3-port solenoid valve for exhausting residual pressure

Symbol	Part no.
٧	V124-5LU-M5
_	None

 A connector with 300 mm lead wire and exhaust port silencer AN05-M5 are included in the package.


* Refer to the specifications (pp. 5 and 6) for more information of each part and the product.



CRP Series



Symbol

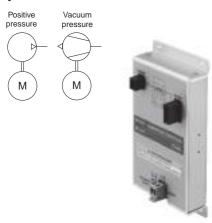

Symbol



Specifications

Compressor

Fluid		Air
Compression m	ethod	Reciprocating (Oil-free)
Max. discharge pressure / U	ltimate vacuum pressure	0.55 MPa / -70 kPa
Max. discharge flow rate	Max. suction flow rate	10 l/min (ANR)
Unloader metho	d (ON-OFF)	Pressure switch
Duty cycle*1		Continuous
Noise*2		62 dB or less (With AN10-01 equipped)
Noise		55 dB or less (With ANB1-01 equipped)
Operating temperature range		5 to 40 °C
Operating humidity range		80 %RH or less (No condensation)
Weight		3.1 kg
Seal material	Sliding parts	PTFE resin
Seai materiai	O-ring	HNBR

Controller

Installation		Separation
Power supply		24 VDC ±10 %
Rated current		4.5 A (110 W)
Instantaneous currer	nt consumption*3	Max. 8 A (200 W)
I ED dioplay	POWER	Green when the power source is ON
LED display	ALARM	Red light on or flashing
		IN (Input for pressure switch)
		1 PNP input
Pressure switch	input	Input current 3.5 mA ±20 % at 24 VDC
		COM+, COM- (Power supply output for pressure switch) 24 VDC +10 %-15 %, Max. supply current 200 mA
Pressure switch options		High-precision digital pressure witch ISE20 series
		PNP open collector output type
		ISE20A-Y-□-□-J-X603
Mounting		Screw mounting / DIN-rail mounting
Cable length		1 m
Cooling system		Natural air cooling
Operating temperature range		5 to 40 °C
Operating humidity range		80 % RH or less (No condensation)
Insulation resistance		Between batch of external terminals and case 50 MΩ (500 VDC)
Weight		Screw mounting: 340 g / DIN rail mounting: 360 g

- *1 The time during which the compressor can operate continuously
- *2 Values in an anechoic chamber, 1.0 m away from the front of the port (at max. discharge pressure) Depending on operating and installation conditions, the values may be higher than those shown in the table.

 *3 When power supply has overcurrent protection function, use an automatic recovery type or a constant current type.

2 Outputs + Analogue Output (Voltage/Current)

3-Screen Display High-Precision Digital Pressure Switch: ISE20A Series

Model	ISE20A-Y-01-J-X603
Rated pressure range	-0.1 to 1 MPa
Output specification	PNP open collector 2 outputs + Copy function
Piping specification	R1/8 Piping adapter
Lead wire	Lead wire with connector (5-core, 2 m lead wire) Without waterproof cover
Switch output setting	Reversed output
Stopping pressure	0.5 MPa
Starting pressure	0.3 MPa

 
^{*} For details, refer to the Web Catalogue.




Compact Compressor CRP Series

Specifications

3-Port Solenoid Valve: V100 Series



For details, refer to the Web Catalogue.

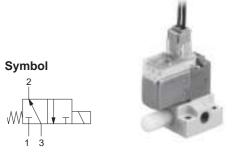

Check Valve with One-touch Fitting: AKH Series

Model	AKH06-00
Туре	Straight type
Connection	One-touch fitting
Applicable tubing O.D. [mm]	Ø 6
Weight [g]	5

^{*} For details, refer to the Web Catalogue.

Symbol





Symbol






Silencer: AN□ Series


Model	AN10-01	ANB1-01
Туре	Compact resin	High-noise reduction
Thread connection port size	1/8	1/8
Weight [g]	1	10

^{*} For details, refer to the Web Catalogue.


Flow Rate Characteristics


Positive pressure

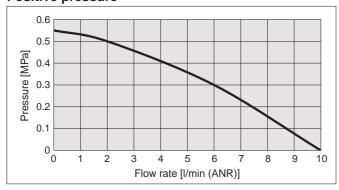

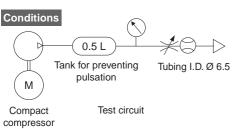


Vacuum

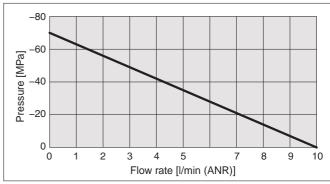


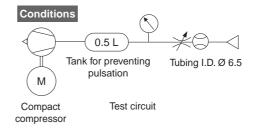

CRP Series


Dimensions

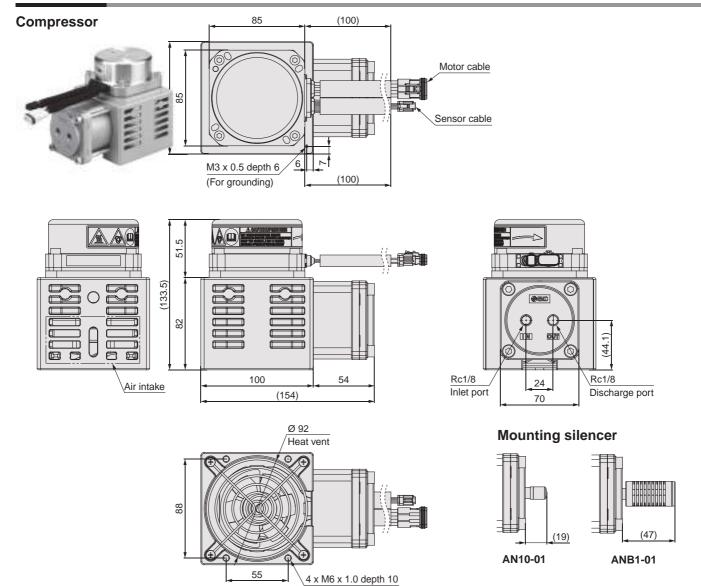


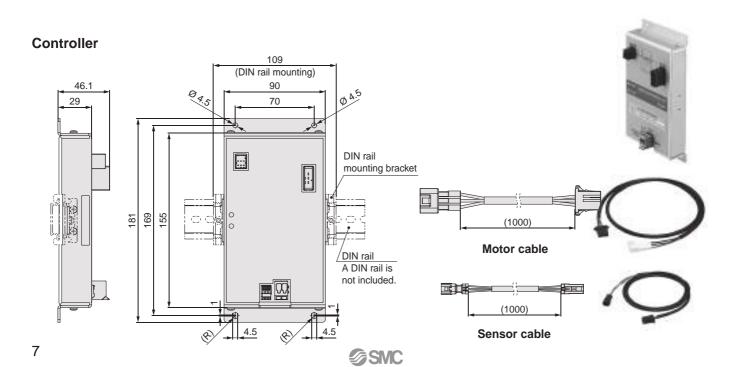

Dimensions


3-Screen Display High-Precision Digital Pressure Switch ISE20A-Y-01-J-X603

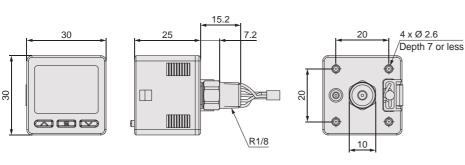


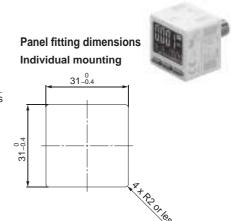

 Lead wire with connector For ISE20A (Part no.: ZS-46-5L)





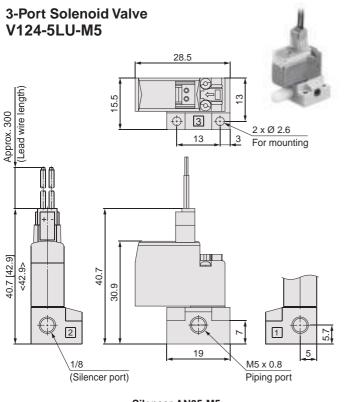


Silencer AN05-M5 Included with the solenoid valve





* A 300 mm connector for the solenoid valve is included in the package.

  Check Valve with One-touch Fitting AKH06-00







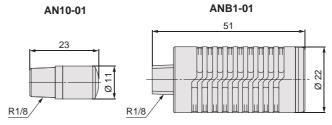

Symbol	Silencer part no.	Noise (Positive pressure)
Α	AN10-01	62 dB or less
В	ANB1-01	55 dB or less





CRP Series Compact Compressor Specific Product Precautions 1

Be sure to read this before handling the products. Refer to the back cover for safety instructions. For precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smc.eu

Design and Selection

⚠ Danger

1. Use this product only for general industrial applications.

Do not use for any life-supporting applications such as respiratory equipment. Any damage to this product may result in a critical accident.

- 2. Do not intake or discharge fluids other than atmospheric air. It could lead to fire, explosion.
- 3. Do not install the product in an environment containing flammable gas, explosive gas, the organic solvents, explosive dust or corrosive gas. It could lead to fire, explosion.
- 4. This product (compressor and controller) does not have a waterproof structure.

Do not use this product in an area where it could get wet, or in environments of high humidity and heavy condensation. This may cause an electric shock, earth leakage, or fire.

- **5.** Do not disassemble the product or make any modifications. It may cause human injury and/or an accident.
- 6. The product becomes hot during operation. Touching it may cause burn injuries. In addition, residual heat after turning off the power may cause burn injuries. Avoid touching the product until it has cooled down sufficiently.
- 7. The product contains a fan and parts that rotate at high speeds during operation. There is a risk of fingers or hand being cut or getting caught by rotating objects. Avoid touching the product during operation.

⚠ Warning

 When using this product in critical applications, make sure to provide a spare device or auxiliary equipment.

This prevents damage when the operation is stopped due to failure or activation of the safety system.

2. Install an emergency stop circuit.

Install an emergency stop outside of the enclosure so that the system operation can be stopped immediately and the power supply can be intercepted.

3. Consider emergency stops.

Design so that human injury and/or damage to machinery and equipment will not be caused when machinery is stopped by a safety device under abnormal conditions, such as a power outage or a manual emergency stop.

4. Consider the whole system.

Design the system so that human injury or equipment damage will not occur upon the restart of operation of the whole system.

 The surface temperature of the product can reach up to approx. 90 to 100 °C depending on operating conditions. Check that the heat emanated will not affect the surrounding.

Design and Selection

2. Provide measures to treat the drain according to the use of compressed air.

This product does not use any lubricating oil during the compression process. However, the compressed air generated contains a drain made of impurities such as moisture, oil content, dust, and wear particles from the atmosphere. Make sure to consider methods of treating this drain as it may cause malfunction if it flows into pneumatic equipment such as cylinders.

Mounting

⚠ Warning


1. If the vibration transferred to the embedded structure deemed large, provide appropriate vibrationproof treatment when fastening the product.


Vibration may transfer to the structure and increase the noise level.

⚠ Caution

 This product exhausts heat using an axial flow fan. Make sure the suction and exhaust grill are unobstructed when installing the product.

The temperature protection system will activate if the motor overheats and stop the operation.

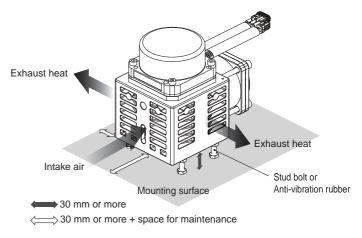

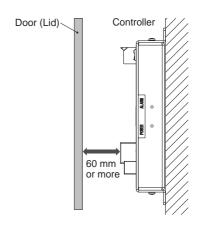



CRP Series Compact Compressor Specific Product Precautions 2

Be sure to read this before handling the products. Refer to the back cover for safety instructions. For precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smc.eu

Wiring

⚠ Caution

1. Be sure to carry out grounding in order to ensure the noise tolerance.

The ground points should be near the compressor or the controller to make the wire length shorter.


Piping

∧ Caution

1. Start-up of this product may be unstable or disabled while it is still pressurised.

Release the pressure inside before restarting the product.

Pneumatic circuit diagram

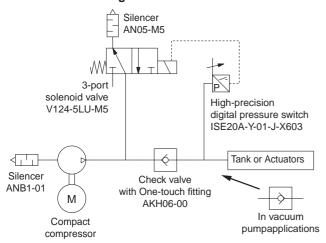

Make sure to mount a silencer on the inlet port for positive pressure and on the discharge port for vacuum.

This will reduce the noise and prevent intrusion of any foreign matter.

Handling

⚠ Caution

1. Do not switch the suction and exhaust ports to change from a positive pressure (compressor) application to a vacuum (vacuum pump) application.

The performance will be significantly reduced. This warning also applies in the opposite situation.

Compliance

1. EMC Directive/Regulations

This product conforms to the applicable CE/UKCA, EMC Directive/Regulations as stated on the Declaration of Conformity when used on its own in accordance with the instructions.

When installed in the finished machine, the conformity with the applicable CE/UKCA, EMC Directive/Regulations shall be confirmed before putting into service.

2. Machinery Directive/Regulations

This product is partly completed machinery under the CE/UKCA, Machinery Directive/Regulations and has been supplied with a Declaration of Incorporation.

When installed in the finished machine, the conformity with the applicable essential health and safety requirements of the CE/UKCA, Machinery Directive/Regulations shall be confirmed.



These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of "Caution," "Warning" or "Danger." They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC) 1), and other safety regulations.

♠ Danger:

Danger indicates a hazard with a high level of risk which, if not avoided, will result in death or serious

⚠ Warning:

Warning indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious

Caution indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate 1) ISO 4414: Pneumatic fluid power - General rules and safety requirements for systems and their components.

ISO 4413: Hydraulic fluid power - General rules and safety requirements for systems and their components.

IEC 60204-1: Safety of machinery - Electrical equipment of machines. (Part 1: General requirements)

ISO 10218-1: Robots and robotic devices - Safety requirements for industrial robots - Part 1: Robots.

etc

1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalogue information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

- 3. Do not service or attempt to remove product and machinery/ equipment until safety is confirmed.
 - 1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
 - 2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
 - 3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.
- 4. Our products cannot be used beyond their specifications. Our products are not developed, designed, and manufactured to be used under the following conditions or environments. Use under such conditions or environments is not covered.
 - 1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
 - 2. Use for nuclear power, railways, aviation, space equipment, ships, vehicles, military application, equipment affecting human life, body, and property, fuel equipment, entertainment equipment, emergency shut-off circuits, press clutches, brake circuits, safety equipment, etc., and use for applications that do not conform to standard specifications such as catalogues and operation manuals.
 - 4. Use for interlock circuits, except for use with double interlock such as installing a mechanical protection function in case of failure. Please periodically inspect the product to confirm that the product is operating properly.

∧ Caution

1. We develop, design, and manufacture our products to be used for automatic control equipment, and provide them for peaceful use in manufacturing industries. Use in non-manufacturing industries is not covered.

Products we manufacture and sell cannot be used for the purpose of transactions or certification specified in the Measurement Act.

The new Measurement Act prohibits use of any unit other than SI units in Japan.

Limited warranty and Disclaimer/Compliance Requirements


The product used is subject to the following "Limited warranty and Disclaimer" and "Compliance Requirements". Read and accept them before using the product.

Limited warranty and Disclaimer

- 1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, whichever is first. 2) Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales
- 2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product
- 3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalogue for the particular products.
- 2) Vacuum pads are excluded from this 1 year warranty. A vacuum pad is a consumable part, so it is warranted for a year after it is delivered. Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited

Compliance Requirements

- 1. The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
- 2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

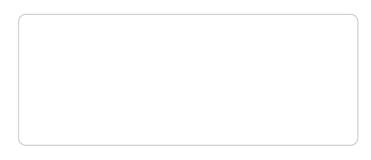

SMC Corporation (Europe)

Austria +43 (0)2262622800 www.smc.at Belgium +32 (0)33551464 www.smc.be Bulgaria +359 (0)2807670 Croatia +385 (0)13707288 www.smc.hr Czech Republic +420 541424611 Denmark +45 70252900 Estonia +372 651 0370 Finland +358 207513513 France Germany +49 (0)61034020 Greece +30 210 2717265 Hungary +36 23513000 Ireland +39 03990691 Italy Latvia +371 67817700

www.smc.bg www.smc.cz www.smcdk.com www.smcee.ee www.smc.fi +33 (0)164761000 www.smc-france.fr www.smc.de www.smchellas.gr www.smc.hu +353 (0)14039000 www.smcautomation.ie www.smcitalia.it www.smc.lv

office@smc.at info@smc.be office@smc.bg office@smc.hr office@smc.cz smc@smcdk.com info@smcee.ee smcfi@smc.fi supportclient@smc-france.fr info@smc.de sales@smchellas.gr office@smc.hu sales@smcautomation.ie mailbox@smcitalia.it info@smc.lv

Lithuania +370 5 2308118 www.smclt.lt Netherlands +31 (0)205318888 www.smc.nl Norway www.smc-norge.no +47 67129020 +48 222119600 www.smc.pl Poland +351 214724500 Portugal www.smc.eu Romania +40 213205111 www.smcromania.ro Russia +7 (812)3036600 www.smc.eu Slovakia +421 (0)413213212 www.smc.sk Slovenia +386 (0)73885412 www.smc.si Spain +34 945184100 www.smc.eu Sweden +46 (0)86031240 www.smc.nu **Switzerland** +41 (0)523963131 www.smc.ch Turkey +90 212 489 0 440 www.smcturkey.com.tr UK +44 (0)845 121 5122 www.smc.uk

info@smclt.lt info@smc.nl post@smc-norge.no sales@smc.pl apoioclientept@smc.smces.es smcromania@smcromania.ro sales@smcru.com office@smc.sk office@smc si post@smc.smces.es smc@smc.nu info@smc.ch info@smcturkey.com.tr sales@smc.uk

South Africa +27 10 900 1233 zasales@smcza.co.za www.smcza.co.za